



Urban Native Greens Nest Box

Tools required:

Jigsaw
 Hammer
 Drill
 1/8" drill bit
 1 1/4" spade bit

Materials:

1 4' 1x6 wood board*
 10 4d nails, 1.5"
 2 Decking screws, 1.5"

*ideally untreated wood



CUT LIST



4.5"	8.25"	8.25"	8.5"	8.5"	9"
FL	FR	B	FS	D	R

Key:	
FS – fixed side	R – roof
D – door	FR – front
FR – front	FL – floor
B – back	


PRE-DRILLING

With 1/8" drill bit, make holes:

- a, f: 1" from top, 3/8" from side
- b, i: 1" from bottom, 3/8" from side
- e, h: 3/4" from bottom, 3/8" from side
- d, g: 2" from bottom, centered
- c: 2" from top, centered; return and cut 1 1/4" hole with spade bit

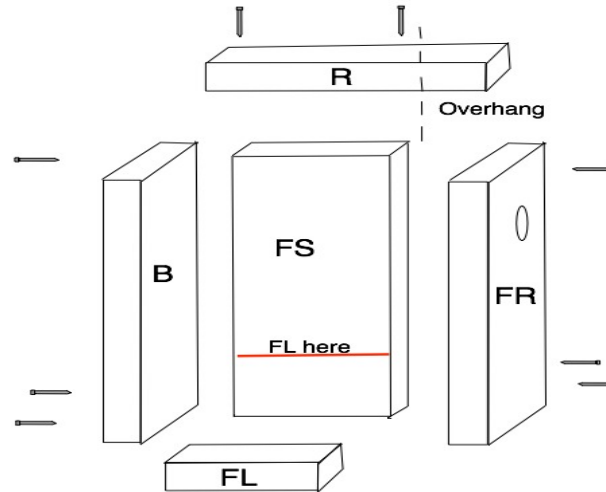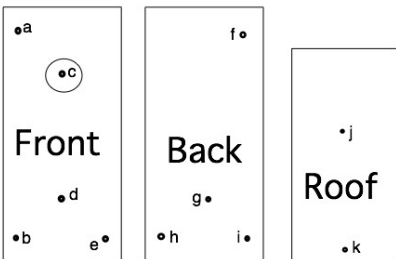

Step 1:
 Assemble the box by nailing together at your pre-drilled holes (except e and h).

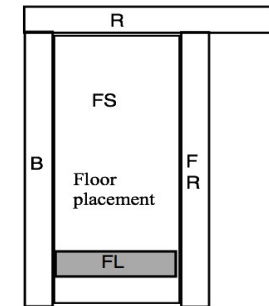

Step 2: Hammer a nail into front of D to use as a handle. Add D to box and screw into place at e and h. Drill through FR into D to create a latch; insert a nail to hold door in place.

